

# EZ Link


## Quick start guide



### Getting to know the Zebra device

#### Scanning

There are scanning buttons on either side of the device. There will also be a scan button on screen when required.

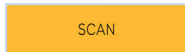

Scan →


← Scan

#### Remove from Charger

To unclip from the charger push one side of the charger clip outwards.



Scanning lens

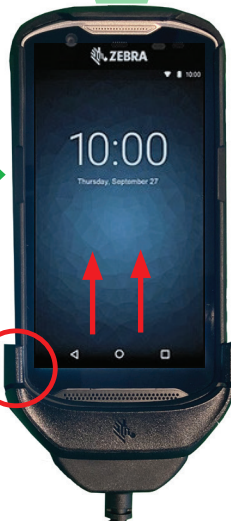

#### Unlock Screen


Unlock device by swiping the screen upwards.




#### Power button

Press and hold down once. If the screen does not light up. Hold the Power Button down until the screen turns on.

Note: If you find yourself at this screen, Tap on the blue EZ Link App symbol to take you back into the app.

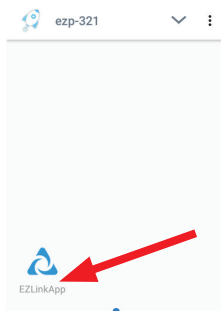

### 1. Sign in using your Participant Code.

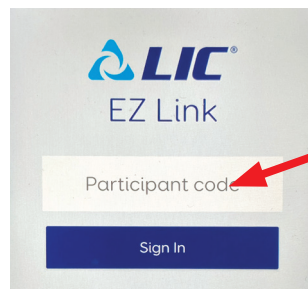

(If you are unsure of your code refer to the sticker on device or EZ Link box).

### 2. Select [Test Setup].



### 3. Fill out mandatory fields

- Previous cups on date.
- Previous cups on time.

Test date  
Tue, 06 Jul 2021

Previous cups on date  
[Redacted] ⚠

Previous cups on time  
[Redacted] ⚠

### 4. Optional settings (if required)

- Enable EID Wand.

Previous cups on time  
5:00 AM

Enable EID Wand  
No

Dairy type  
Herringbone

#### Record Screen

- Tap to connect
- Connected

### 5. Optional settings (if required)

- Alternate scan. (Herringbone only)

Alternate scan  
Off

Number of positions  
5

Milking regime  
Twice A Day

### 6. To complete set up click the




button.

## Rotary


1. Select  REVERSE to change bail numbers from ascending to descending.



WARNING: This can only be selected before entering first animal in session.

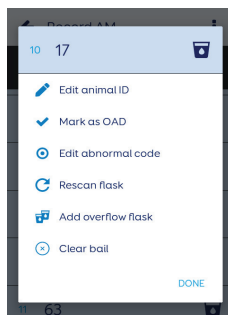2. Tap on the bail to bring up below options:

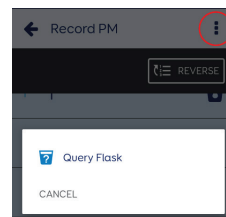


3. Select the three dots in top right hand corner to display the following options:




4. When finished session select  to go back to home screen and select  Logout


5. Please reconnect to the charging unit and plug in to power.


## Herringbone

1. Select  REVERSE to change bail numbers from ascending to descending.


- Alternative scan ON - select before entering first animal ID in row.
- Alternative scan OFF - select before entering any animal IDs or before scanning any flasks in row.

2. Select  ADD EXTRA BAIL to add an extra bail.


3. Select  SCAN FLASKS after entering all animal IDs in the row. (Alternative scan off).

4. Select  COMPLETE ROW after scanning flasks to start a new row.

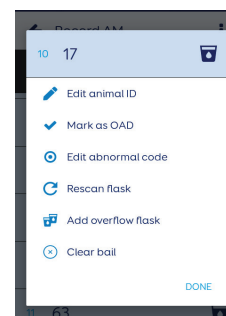

5. Tap on the bail to bring up below options:

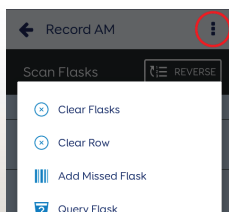


6. Select the 3 dots in top right hand corner to the display following options:



7. **Short row** - skip all remaining empty bails.

- Scroll to bottom of record screen.
- Select  SCAN FLASKS or  COMPLETE ROW
- Confirm by selecting "Begin Scanning" or "Complete Row" on warning.

8. When finished session select to go back to home screen and select  Logout

9. Please reconnect to the charging unit and plug in to power.

If you need any further assistance call the EZ Link Support Line 0800 439 5465 (0800 4 EZLINK).

© 2019 Livestock Improvement Corporation Limited ("LIC"). LIC is the owner of all Intellectual Property Rights connected with the brand names MINDA®, MINDA Pro™ and the product Herd Testing.

